

# All Occasions Party Rentals, Inc.

*From Moments to Milestones ... We Rent for Your Event!*

1936 Windsor Road, Kelowna BC V1Y 4R5

Phone: 250-763-8687 Fax: 250-763-9945

On the web: [www.alloccasionspartyrent.com](http://www.alloccasionspartyrent.com)

Email: [alloccasions@telus.net](mailto:alloccasions@telus.net)

## Punch Fountain Instructions

**DO NOT USE PUNCH RECIPES WITH PULPY JUICES.** Pulp, even a little teeny bit of pulp (or anything else small enough to get sucked into the pump such as small fruit pieces), will clog the motor and cause it to burn out. Motor replacement is \$250.00. Do not allow the fountain to run dry as this will also harm the motor. Never immerse the base of the fountain in water as this is where the electrical components are housed.

1. Place the fountain on a flat, level surface. Fill the fountain from smaller containers, such as buckets or jugs. Never fill the fountain and then try to carry it to the desired location as it will probably spill everywhere. Fill the bowl of the fountain at least half way and ensure that it remains filled so that it does not run dry. Do not try to fill the fountain by pouring the liquid over the top and letting it run down.

2. Once the fountain is filled, plug it in and then flip the switch on the base of the fountain. The centre column should light up and you eventually should hear the pump kick on. It typically does take a few minutes to start going properly.

3. The punch will only flow out of the little spouts located under the rim of the fountain. You may get a little coming down from the second tier, but the punch does not flow from the very top of the fountain.

4. The fountain does not keep liquids cold. To chill your beverage, put large chunks of ice, ice cubes, or pieces of dry ice into the bowl of the

fountain. Carbonated beverages are also not recommended as the circulation of the liquid will cause it to go flat.

5. To empty the fountain, remove most of the liquid using a jug or glass. Using two people if possible, gently tip the fountain over a sink, while supporting the centre column, to remove the rest of the liquid.

6. After the fountain is empty, you can run clean water through it for about 15 minutes. Do not take the fountain apart for further cleaning or use any kind of cleaning product on it.