

# All Occasions Party Rentals, Inc.

*From Moments to Milestones ...We Rent for Your Event!*

1936 Windsor Road, Kelowna BC V1Y 4R5

Phone: 250-763-8687 Fax: 250-763-9945

On the web: [www.alloccasionspartyrent.com](http://www.alloccasionspartyrent.com)

Email: [alloccasions@telus.net](mailto:alloccasions@telus.net)

## Propane Tent Heater

Output: 80,000 BTU

Fuel consumption: 3.7lbs per hour

The heater must be installed level and according to minimum clearances from combustible surfaces. Try to position the heater in a low traffic area. The heater's gas regulator and gas supply must be located outside of the tent and must be protected from weather at all times. The heater can only be used in a fully walled tent. Using it inside a tent without walls is like using a home furnace with all the doors and windows open.

Do not force the gas control knob. The knob should be turned by hand only. If it cannot be turned by hand, do not use a tool as the knob may need to be replaced.

### **To turn the heater on:**

- Set the function selector switch to "Heat".
- Open all fuel supply valves. Make sure the gas control valve is switched to "On".
- Connect the extension cord to an outlet.
- Set the thermostat to the desired temperature. The motor will start and run for a few seconds prior to spark and ignition. If there is any air trapped in the gas hose, the heater may attempt to light several times before the air is moved from the line.
- The heater will cycle itself on and off based upon the thermostat setting.

### **To turn the heater off:**

- Shut off the valve on the propane tank.
- Relight the heater briefly to burn off the excess fuel in the gas line.
- Shut off all other gas supply valves.
- Turn the thermostat to the "Off" position.
- Move the function selector switch to "Off" position.
- Disconnect extension cord.
- Disconnect the propane tank fitting.