

ALL OCCASIONS

PARTY & EVENT RENTALS

PUNCH FOUNTAIN OPERATING INSTRUCTIONS

To fill the fountain, use a jug to bring to location or place fountain on a rolling cart, fill then roll to your location.

To chill your beverage, put in a large chunk of ice, ice cubes or several pieces of dry ice in the bowl. Pre cool beverages when ever possible.

To empty the fountain, use a pitcher or glass to remove the majority of the liquid. Next gently tip fountain bowl over a sink while supporting the upper column with your other hand. If possible have a second person support the upper column while the other person tips the fountain towards the sink.

After use, put clean fresh water in the bowl, preferably warm. If possible, add two tablespoons of baking soda. Let the fountain run approximately 15 minutes, empty the fountain and rinse the fountain.

CAREFULL: DO NOT TAKE THE FOUNTAIN APART OR USE ABRASIVE CLEANERS TO CLEAN THE FOUNTAIN.

Only use punch mixtures **WITHOUT PULP**. Pulp will clog the pump and may burn out the motor. Replacement costs of the motor are a minimum of \$250.

Please do not run the fountain **DRY**, again, this could burn out the motor.

NEVER IMMERSE the base of the fountain in water as this is where the electrical components are located.