

All Occasions Party Rentals, Inc.

From Moments to Milestones ...We Rent for Your Event!

1936 Windsor Road, Kelowna BC V1Y 4R5

Phone: 250-763-8687 Fax: 250-763-9945

On the web: www.alloccasionspartyrent.com

Email: alloccasions@telus.net

Walkie Talkie Two-Way Radio

Using the battery charger:

- Place the charger on a flat surface and plug it into the wall.
- Facing the radio forward, place it into one of the charging slots.
- Make sure the radio is turned off. A red light will indicate that the radio is inserted correctly and charging. The red light will stay on after battery is fully charged.
- An empty battery should take approx. 14 hours to fully charge. Do not leave the radio in the charger longer than 16 hours.

Using the radio:

- Turn the top knob clockwise to turn the radio on and counterclockwise to turn the radio off. In the "on" position, the radio will chirp and briefly show all feature icons on the display.
- All radios need to be set to the same channel in order to communicate with each other. To select a channel press the "menu" button in the middle of the controls. Use the buttons marked "+" and "-" to select a channel. Press the "PTT" button to save the channel.
- To set the volume, press and hold for three seconds the button on the top right of the controls while rotating the top knob to adjust the volume.
- Push the button marked "PTT" on the side of the radio to talk and release when finished.