

All Occasions Party Rentals, Inc.

From Moments to Milestones ... We Rent for Your Event!

1936 Windsor Road, Kelowna BC V1Y 4R5

Phone: 250-763-8687 Fax: 250-763-9945

On the web: www.alloccasionspartyrent.com

Email: alloccasions@telus.net

Hot Dog Cooker Instructions

For initial cooking:

1. Place hot dogs on skewers so they are evenly distributed on the stem (i.e. not all on one side).
2. Turn the control to the H (high) position and turn the rotisserie on. Cooking time will be approximately 20 minutes. For slower cooking, use the M (medium) setting (cook time approximately 45 minutes) or the L (low) setting (cook time approximately 1 hour).

When adding hot dogs:

1. Turn the rotisserie off. Place the new hot dogs on the stem so they are evenly distributed. Turn heat setting to M (medium) to slow cook the new hot dogs while not overdoing the already cooked hot dogs. Turn the rotisserie back on.

To hold hot dogs at one temperature, use the L (low) setting and leave the rotisserie on.

To serve, turn the rotisserie off and remove the cooked hot dogs with tongs. Buns can be warmed in the top of the hot dog cooker under the lid.