All Occasions Party Rentals, Inc.

From Moments to Milestones ... We Rent for Your Event! 1936 Windsor Road, Kelowna BC V1Y 4R5 Phone: 250-763-8687 Fax: 250-763-9945 On the web: <u>www.alloccasionspartyrent.com</u> Email: alloccasions@telus.net

EZ-Up Tent Instructions

1. With 2 people, stand the tent right side up with the feet flat on the ground.

2. Standing on opposite ends of the tent, grasp the lower truss bars at the bottom of the "V" shape, lift and pull the frame until is it fully extended.

3. At each corner, push up on the plastic fitting until the buttons lock the corners into place.

4. Extend the inner legs out of the socket until the button clicks into place. It's easiest to do this two legs (one side) at a time, with one person on each leg.

5. Secure the tent with sandbags around the legs or stakes to protect from wind.

6. To take the tent down, release the corners first. If you don't do this, you will have to force the tent closed, which will damage the frame. Release the legs and allow them to slide back up into the sockets, one side at a time. Grasping the frame at the same "V" shaped lower truss, slowly walk the tent towards each other, taking care not to force the joints to collapse. Once the tent is fully dissembled, slide the bag over the top.